

DATAVIEW[®] SOFTWARE SUPPORTS THE FOLLOWING INSTRUMENTS:

DATA LOGGERS

- MODEL DL913
- MODEL DL914
- MODEL L452
- SIMPLE LOGGER II SERIES

ENVIRONMENTAL TESTERS

- MODEL 1110
- MODEL 1227
- MODEL 1246
- MODEL 1821
- MODEL 1822
- MODEL 1823
- MODEL 1510

INSTALLATION TESTERS

- MODEL 6116
- MODEL 6116N
- MODEL 6117

GROUND TESTERS

- MODEL 6417
- MODEL 6470-B
- MODEL 6471
- MODEL 6472

MEGOHMMETERS

- MODEL 1060
- MODEL 5060
- MODEL 5070
- MODEL 6526
- MODEL 6532
- MODEL 6534
- MODEL 6550
- MODEL 6555

MICRO-OHMMETERS

- MODEL 6240
- MODEL 6250
- MODEL 6255
- MODEL 6292

POWER METER & LOGGERS

- MODEL PEL 52
- MODEL PEL 102
- MODEL PEL 103
- MODEL PEL 105
- MODEL PEL 112
- MODEL PEL 113
- MODEL PEL 115
- MODEL 3945-B

MODEL 8220

- MODEL 8230
- MODEL 8333
- MODEL 8335
- MODEL 8336
- MODEL 8345
- MODEL 8435
- MODEL 8436

POWER CLAMP-ON METERS

- MODEL 407
- MODEL 607

RATIOMETERS

- MODEL DTR 8510

NOTE: Power Quality Loggers and sentinel series are not supported in DataView[®] versions above 3.09.0008