


BATTERY PACK REPLACEMENT

POWERPAD[®] IV MODEL 8345, OSCILLOSCOPE MODELS OX 9000 SERIES AND MULTIFUNCTION INSTALLATION TESTER MODELS CA 6116N & CA 6117

Removing Battery Pack from Instrument:

1. Disconnect everything that is connected to the instrument.
2. Turn the instrument so its backside is facing you. The installed battery pack and battery release recess are exposed.

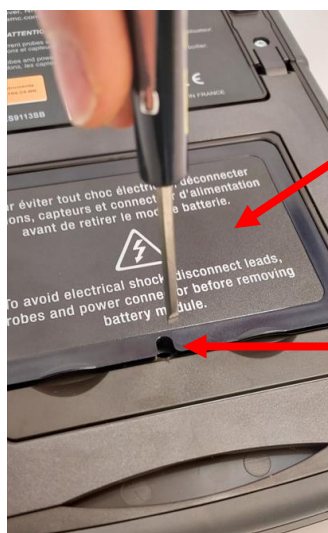

Installed Battery Pack

Battery Release Recess

3. Insert a small flat head (slotted) screwdriver straight into the battery release recess.
4. Gently, push down on the screwdriver to release the battery.



Battery Release Recess

5. Use the two notches to help lift the battery from its compartment.
6. Grab battery pack with your fingers and extract from its compartment.



Notches

7. Install replacement battery pack.
8. Properly dispose of old battery pack.



Battery Pack – Cat. #2960.47